




Push to call office button places a call into the office. Push the upper left part of the button.

The More button changes to the next screen.

Home Button, not used on this screen

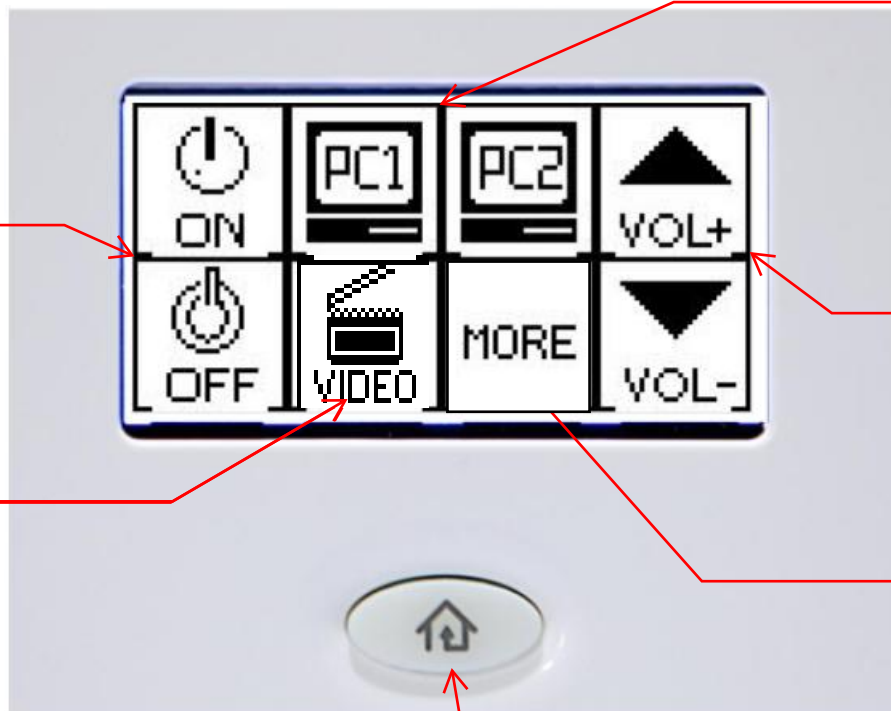

On and Off turns on and off the projector. Once turned off it takes a few minutes to be able to power back on.

PC1 and PC2 selects which input is selected on the projector. The audio follows this selection.


Volume Up and Down

The Video Button changes the Projector to the video input.

The More button changes to the next screen.

Home

Blank On and Blank Off blanks the projector image.

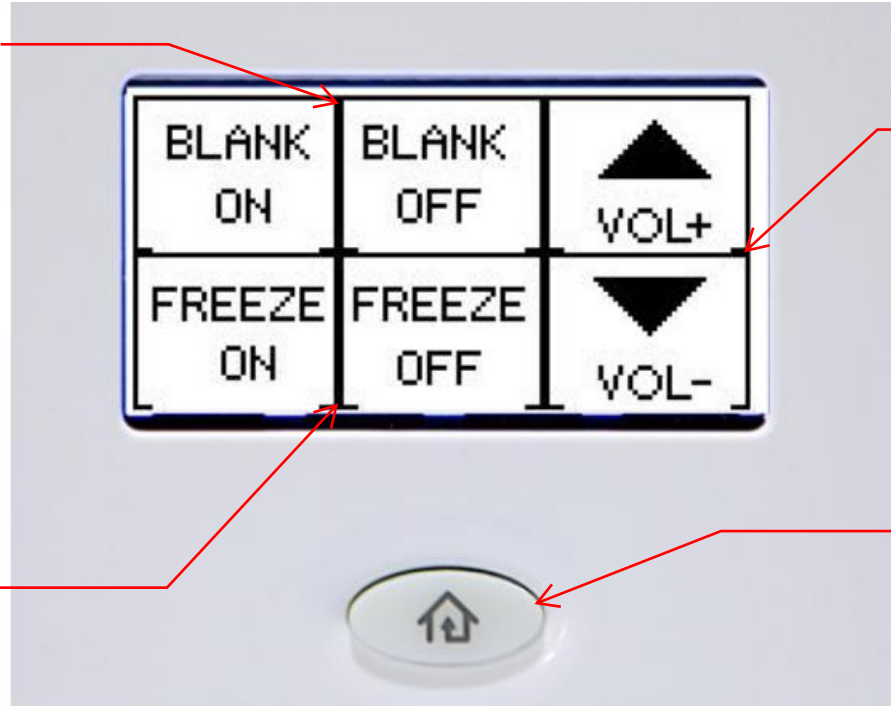


Volume Up and Down

Freeze On and Freeze Off freezes the image on the projector. This will allow changes to be made to the computer without showing on the projector screen.

The Home button returns you to the home screen.

VGA 1 and Audio 1 correspond to PC 1 on the wall plate.

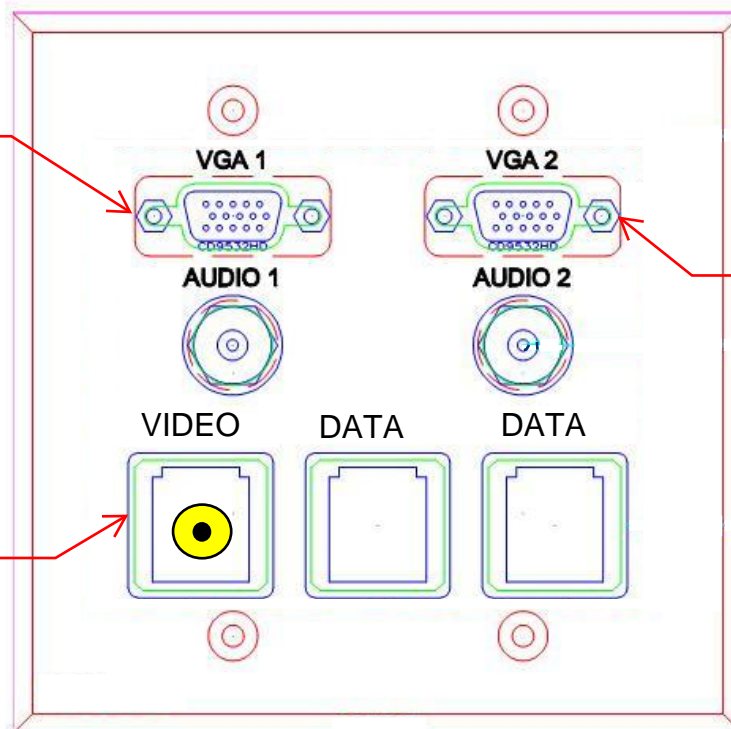

VGA 2 and Audio 2 Correspond to PC2 on the wall plate. Rooms that have an additional VGA plate also correspond to PC2 on the wall plate.

Video input allows for a DVD/VCR to be viewed on the projector. The audio is plugged into Audio 2 using an adapter supplied for each plate.